



Manufactured By  
ROBAND AUSTRALIA PTY LTD



# OPERATING INSTRUCTIONS

## MODULAR HEAT LAMP

Models

HL350

Version  
1

### Special Features:

- Dual Jacket Lamp
- Long-Life Lamps
- Easy Fit Lamps



These instructions cover ROBAND® Modular Heat Lamps only.

Roband® Australia is a wholly Australian owned company and has been manufacturing quality commercial catering equipment for the food service industry for more than 50 years. Roband products are engineered and manufactured to the highest standards to provide functionality, reliability and durability, and our quality products are exported world-wide.

Included in the comprehensive Roband® range are Toasters, Fryers, Milkshake Mixers, Rotisseries, Food Display Cabinets and much more.

Roband® Australia also acts as the Australian agents for Vitamix® Blenders, Noaw® Meat Slicers, Förje® Cookware, Robalec™ Soup/Rice Warmers, Robatherm Urns, Austheat® Fryers, Dipo Induction & Autofry Machines. Roband also has its own line of commercial cookware and cutlery under the Robinox® brand name.

For a complete set of brochures please contact your nearest authorised dealer or contact Roband directly at our head office.

<b>Roband Head Office</b> Sydney, Australia	
Roband Australia Pty Ltd 1 Inman Road Dee Why NSW 2099 AUSTRALIA	Tel: +61 2 9971 1788 Fax: +61 2 9971 1336 Email: <a href="mailto:sales@roband.com.au">sales@roband.com.au</a> Web: <a href="http://www.roband.com.au">www.roband.com.au</a>
<b>International Agents</b> For additional agents please email Head Office	
<b>Belgium</b> Linum Europe Ph: +32 (0)56 35 92 96	<b>Noumea:</b> Comptoir Materiel Professionnel Ph: +687 28 50 43
<b>Fiji:</b> Hotel Equipment Ltd Ph: +679 672 0666	<b>Papua New Guinea:</b> Brian Bell & Company Pty Ltd Ph: +675 325 5411
<b>Germany</b> Lolsburg Ph: +49 93059878-0	<b>Singapore:</b> Allied Foodservice Equipment Ph: +65 62525880
<b>GREECE</b> K&N Engineers Ltd Ph: +30 210 520 0440	<b>South Africa</b> Foodservice Solutions (Pty) Ltd Ph: +31 306 017 442
<b>Hong Kong:</b> Chung Wah Kitchen Machine Ltd Ph: +852 2334 5411	<b>Thailand:</b> Seven Five Distributors Co Ltd Ph: +662 866 5858
<b>Italy</b> NOAW Ph: +39 0331 219723	<b>United Kingdom</b> Metcalfe Catering Equipment Ph: +44 (0) 1766 830456
<b>Malaysia:</b> Allied Food Equipment Ph: +603 9133 5833	<b>United Arab Emirates:</b> Boncafe Middle East LLC +9714 282 8742
<b>Maldives:</b> Radiant Heat Maldives Pty Ltd Ph: +960 333 4845	<b>United Arab Emirates:</b> Nisa Trading LLC +9714 396 6132
<b>New Zealand:</b> Roband New Zealand Ph: +649 274 1354	<b>U.S.A.</b> Smart Kitchen Solutions Ph: +1 508 244 1365

© Copyright 2015 – Roband® Australia Pty Ltd

All rights reserved. No part of this work may be reproduced or copied in any form or by any means, electronic or mechanical, including photocopying or posting to a website, without the written permission of the publisher. The material contained within this document is intended entirely for instructional purposes.

---

# CONTENTS

INTRODUCTION .....	1
GENERAL PRECAUTIONS .....	1
PACKAGING .....	2
COMPLIANCE .....	2
IMPORTANT INFORMATION .....	2
INSTALLATION .....	4
LAMP REPLACEMENT & INSTALLATION .....	6
ELECTRICAL CONNECTION .....	8
OPERATION .....	8
CLEANING, CARE & MAINTENANCE .....	10
TROUBLESHOOTING .....	11
SPECIFICATIONS .....	11
SPARE PARTS LIST .....	11
WARRANTY .....	12

---

## INTRODUCTION

Congratulations on your purchase of this quality ROBAND® product. With proper care and management, your new purchase will give you years of trouble free service.

By reading these instructions carefully you can ensure that this machine is used and maintained properly, helping your new investment to perform well for you now, and to continue performing in the many years to come.

## GENERAL PRECAUTIONS

This machine must only be operated by qualified person(s) who are fully versed in the operating and safety instructions described in this manual. Servicepersons should be instructed to familiarise themselves with any and all safety instructions described in this manual prior to commencement of any maintenance or service.

In the case of new personnel, training is to be provided in advance. These machines should not be operated by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the safe use of the appliance by a person responsible for their safety.

 These machines are heating units, and as with any commercial heating unit the surfaces on these heat lamp assemblies will get **very hot**. Always be careful when near an operating heat lamp, and ensure that any risk to unwary customers or staff is minimised with additional signage if necessary. Due to the obvious heat hazard Roband recommends that these units be kept out of reach of children.

The performance of this unit cannot be guaranteed for operational use outside its design parameters. These heat lamp assemblies are designed mainly for the heating and warming of food. They are **not** designed for the cooking of food.

 The machine should be disconnected from all power and allowed to cool before cleaning.

### **ROBAND WILL ACCEPT NO LIABILITY IF;**

- ◆ Non-authorized personnel have tampered with the machine.
- ◆ The instructions in this manual have not been followed correctly.
- ◆ Non-original spare parts are used.
- ◆ The machine is not cleaned correctly, with the right product.
- ◆ There is any damage to the unit.

---

## PACKAGING

Roband® ensures that every unit is functional and undamaged at the time of packaging, and all care is taken.

The Package of this Heat Lamp Assembly should include:

- 1) One Heat Lamp Assembly
- 2) This Manual
- 3) Packaging Materials

Any damage to the machine as a result of freight must be reported to the Freight Company and to the agent responsible for the dispatch of said unit within 24 hours of receipt. No claims will be accepted or entertained after this period.



### **RCM:**

Roband® products have been designed and manufactured to comply with any and all specifications set out by the Australian Communications and Media Authority (ACMA) in regards to Electromagnetic Compatibility. As testament to such compliance these units bear the RCM symbol.

For further information contact the Australian Communications Authority, PO Box 13112, Law Courts, Melbourne VIC 8010.

### **CE:**

Roband® products bearing the CE compliance mark have been designed and manufactured to comply with European Standards and Directives.

## IMPORTANT INFORMATION

### **PACKAGING**

Remove all the packaging materials and tape, as well as any protective plastic from the machine. Clean off any glue residue left over from the protective plastic or tape.

### **VIBRATION**

These heat lamps have halogen globes which are inherently very fragile. These heat lamps are not suitable for applications where vibration or motion can occur. Warranty does not cover globe failures including failure caused by vibration or motion. Before moving the heat lamp, ensure power is switched off for at least one minute to allow for sufficient cooling.

---

## **CHECK THAT LAMPS ARE INSTALLED CORRECTLY**

Due to the fragile nature of the lamps, the lamp is shipped uninstalled, in separate or additional packaging to protect it from failure during transit. Please consult the installation section of this manual for further information on “Lamp Replacement and Installation.”

## **VENTING FOR HEAT LAMPS MOUNTED IN ENCLOSED SPACES**

Units must be mounted as described in the “Installation Procedure” with adequate clearance for ventilation. As ventilation is most important to dissipate heat, the units should not be fully “boxed in”.

## **CAUTION HOT**

These units will get very hot during operation. For this reason it is recommended that all care be taken to avoid operation in areas where contact is likely to occur. All surfaces on these units will be hot when in use. These units must not be installed near flammable materials or near surfaces that could be adversely affected by high temperatures. The area immediately above the heat lamp will become very hot when the heat lamp is switched on.

## **WARRANTY**

As these heat lamps are intended for use by equipment manufacturers and their application and installation are beyond Roband® control, they are only covered by a limited warranty against faulty workmanship and materials for a period of 12 months from date of purchase. The quartz halogen lamps are not included in this warranty. All goods that are claimed under this warranty must be returned to the factory, freight prepaid, for inspection. Any part deemed to be defective will be replaced, however, no claims will be entertained for parts damaged in transport, misused or modified in any way without our approval.

## INSTALLATION

These units are designed to be mounted above food serving and preparation areas providing both **HEAT** and **LIGHT**.


We recommend mounting heights between 300mm and 400mm above the surfaces of products to be heated. Note; the lower the mounting height the smaller the heated area will be and the higher the temperature. The higher the mounting height, the larger the heated area but the lower the temperature.

The heat lamp is suited to 220-240V AC 50-60Hz Power supply.


It is the Installation Technician's responsibility to ensure that the product is installed in accordance with all state and LGA requirements. Provisions for switching and power disconnection are the responsibility of the installer. This can include a remotely located switch.

### INSTALLATION PROCEDURE


- 1) Grip the wire lamp guard between thumb and forefinger on left and right guard bars. Squeeze towards the centre to release the guard and let the guard rotate downwards.
- 2) Remove the lamp from the enclosure

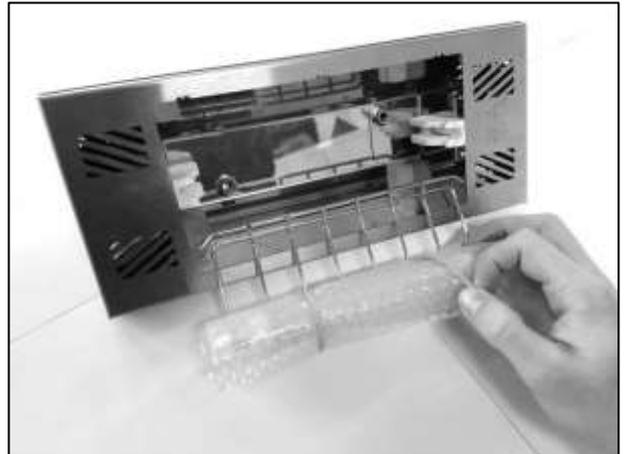


- 3) Use a 6 mm nut driver to remove the nuts located between the body and cover
- 4) Carefully separate the heat lamp body and cover

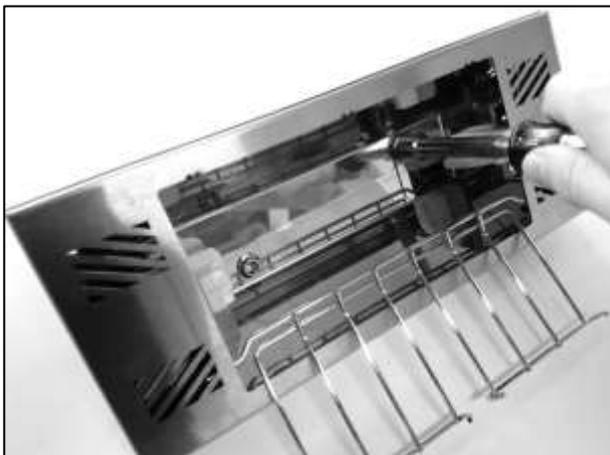

- 5) Remove the PTFE sleeve and silicone grommet from the cover
- 6) Align the top cover in desired installation position. Mark the mounting hole position using the outer hole as a template

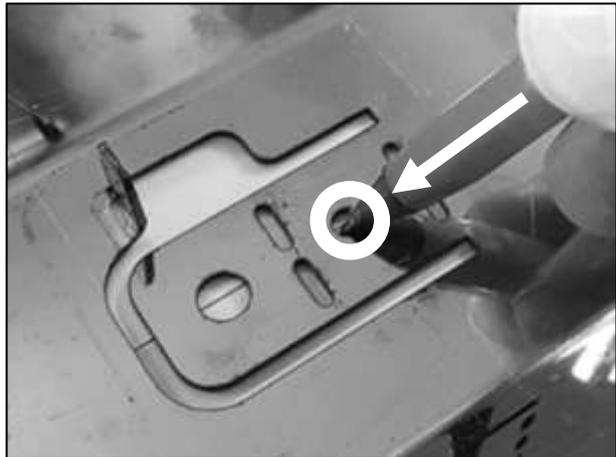

- 7) Drill holes as required for the mounting screws / bolts being used, according to the fasteners specification
- 8) Bend both finger fold tabs at 90 degrees in two stages as shown below, such that the top tab is parallel to the top of the cover.

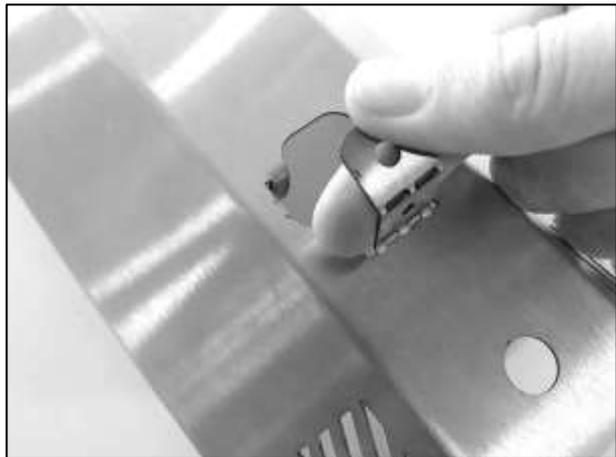

- 9) Re-insert the silicone grommet and PTFE sleeve so that approximately 20 mm of the PTFE sleeve extends into the cover.



- 10) Install the heat lamp cover to the desired mounting location – screw / bolt the heat lamp cover to the mounting face as shown.



- 11) Reverse Steps 3 & 4 - Reinstall the heat lamp body into the cover and fasten the two flanged nuts with a 6 mm nut driver, taking care not to strip or bend the threaded tabs





- 12) Install the lamp as shown in the “Lamp Replacement & Installation” instructions below.

## LAMP REPLACEMENT & INSTALLATION

- 1) Disconnect unit from power, unplug the machine and allow to cool to room temp before replacing lamps.
- 2) Grip wire lamp cover/guard between thumb and forefinger on left and right element guard bars. Squeeze towards the center to release the guard and let the guard rotate down.



- 3) If replacing existing lamps, remove old lamp by gripping around large diameter of ceramic end. Using gentle force, push the lamp to one side so that the opposite end is clear of the Terminal Pin. Rotate lamp down and remove from heat lamp body.
- 4) Remove new lamp from packaging and grip around large diameter of ceramic end. Insert alternate end of lamp into ceramic terminal block, taking care to line up Center Pin of lamp, with Terminal Pin in terminal block.

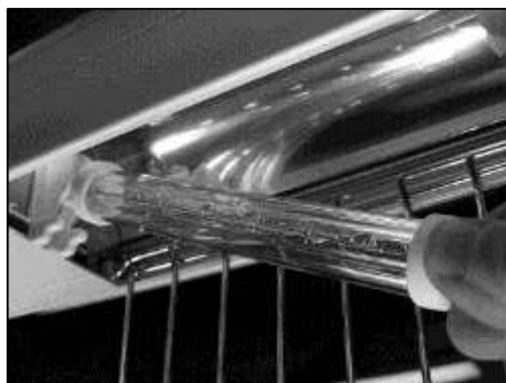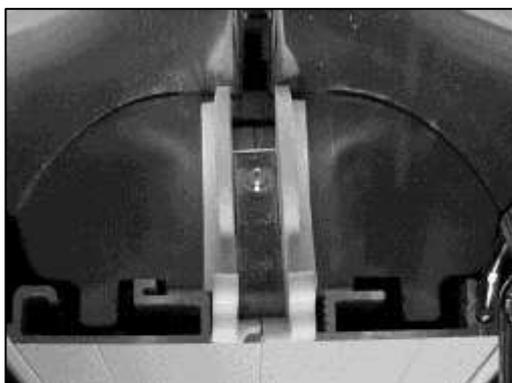

- 5) Using gentle force, push the lamp so that the sprung terminal pin and lamp end are compressed about 4mm. Rotate alternate end of lamp up into the terminal block taking care to line up Centre Pin of Lamp with Terminal Pin in terminal block. Release spring and allow lamp to seat between the two terminal blocks. Jiggle lamp slightly to make sure it is secure in place.



- 6) Snap the lamp guard back in place.



---

## ELECTRICAL CONNECTION



A qualified electrician must connect the lamps to the electrical supply. When installing, the lamp must be wired through a suitable controlling switch placed in a position where it can be easily be operated or controlled by the person/s using the lamp.

## OPERATION

Make certain that the lamps have been installed correctly in the lamp holder. This can be done by means of a visual check. If it appears that the globes are not installed correctly, consult the “Lamp Replacement” section of this manual.

*NOTE: Due to the fragile nature of the lamps, the lamps are shipped in additional/separate packaging to protect it from failure during transit.*

These units will get very hot during operation. For this reason it is recommended that all care be taken to avoid operation in areas where contact is likely to occur. All surfaces on these units will be hot when in use.

---

## ⚡ SAFETY ⚡

This machine contains no user-serviceable parts, with the exception of the Lamp itself. Roband Australia, one of our agents, or a similarly qualified person(s) should carry out any and all repairs. Any repair person(s) should be instructed to read the Safety warnings within this manual before commencing work on these units.

Steel cutting processes such as those used in the construction of this machine result in sharp edges. Whilst any such edges are removed to the best of our ability it is always wise to take care when contacting any edge.

Particular care should be taken to avoid contact with any steel edge, and warnings should be given in regards to the danger of such contact to any repair or maintenance person(s) prior to commencement of any servicing.

Do not remove any cover panels that may be on the machine.

National Standards exist outlining the positioning, spacing and ventilation requirements when installing new appliances. These Standards should be consulted and new equipment should be installed accordingly. In any situation where specifications allow a distance of less than 100mm we would still recommend that a well-ventilated air gap of not less than 100mm be maintained on all sides and that any materials closer than 100mm be non-flammable. If the machine is near particularly heat-sensitive materials common sense should be employed in determining sufficient distancing.

Ensure that any damaged cables are replaced before further use.

Keep out of reach of children or the inept.

This unit can get **very** hot. Ensure everyone is aware that the machine is operating and take care to avoid contact with hot surfaces.



Always ensure the power cable is not in contact with hot parts of the machine when in use.

---

## CLEANING, CARE & MAINTENANCE

Attention to regular care and maintenance will ensure long and trouble free operation of your heat lamps or heat lamp. Although scheduled servicing is not required we do recommend you adopt a program of regular maintenance to ensure that the heat lamp or heat lamp assemblies are clean and functional and to avoid inadvertently damaging the unit.

Daily cleaning should be considered mandatory for all cooking equipment. In order to ensure the proper cleaning and to avoid damage to the heat lamp assemblies the instructions below should be followed.

- ◆ Ensure the power is off and the heat lamp is cool before attempting to clean any part of the machine.
- ◆ Wipe the lamp cover down with warm soapy water using a **damp** sponge or cloth. **Do not** immerse the heat lamp in water.
- ◆ **Do not** let any moisture enter inside the heat lamp or near the halogen lamps.
- ◆ Do not clean this unit with the use of a water jet.

Although every care is taken during manufacture to remove all sharp edges, care should be taken when cleaning and handling the heat lamp assemblies to avoid injury.

## TROUBLESHOOTING

If the heat lamp assembly does not function check the following points before calling for service.

- ✓ The device has power supply switched on
- ✓ The halogen heat lamp or lamps have not failed
- ✓ The halogen lamp is installed

## SPECIFICATIONS

Model	Power Source	Power Rating	# Of Lamps	Nominal Dimensions		
				Length mm	Depth mm	Height mm
HL350	240 Volts AC	350 Watts	1	280	122	55

## SPARE PARTS LIST

### PARTS FOR HL350

PART NO	DESCRIPTION
EC0420	Terminal Block - Lamp
EC0421	Lamp – 350W
MC0929	Globe Guard

PART NO	DESCRIPTION
MC1161	M6 Ribbed Flange Nut
PC0469	PTFE Sleeve Grey
PC0599	Grommet

---

## WARRANTY

Every care is taken to ensure that no defective equipment leaves our factory and all goods manufactured by us are guaranteed against defective workmanship and materials for a period of 12 months from the date of purchase. Roband Australia's obligations pursuant to this express warranty being limited to the repair or replacement of the defective goods or materials, at is option and subject to the terms contained within this Warranty statement. Where relevant, glass, Teflon® and lamps are **not** included in this warranty and RCD tripping due to moisture absorption by Tubular Heating Elements is not considered a warranty fault.

Generally, all goods claimed under this warranty must be returned to the factory or an authorized service agent, freight prepaid, for inspection. All parts deemed to be defective will be replaced, however, no claims will be entertained for second hand products, or parts damaged in transport, misused or modified in any way without our approval. For machines that are not considered to be portable (e.g. food bars, rotisseries, large hotplates and some bain maries), on site warranty service will be provided in capital city metropolitan areas only. In all other locations, the customer is responsible for all travelling time/service call costs and payment for this will be required prior to the commencement of the repair. The labour costs to actually repair the fault will be met by the company.

Any repairs or replacement of defective goods or materials pursuant to this warranty, must be authorized by Roband Australia prior to any action being taken. The company reserves the right to reject a claim for warranty if it is not completely satisfied with the circumstances under which it occurred and any other costs incurred for false claims or faults due to incorrect usage etc. are the responsibility of the claimant. Roband Australia Pty Ltd nor any subsidiary company or Agent shall be liable for loss of profit or damage to other equipment and property except where it is in breach of the guarantees provided in accordance with Schedule 2 of the Competition and Consumer Act 2010 (Cth) or the applicable legislation from time to time.

The goods come with guarantees that cannot be excluded under the Australian Consumer Law (ACL). You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if they fail to be of acceptable quality and the failure does not constitute a major failure.

Generally, authorized service agents are located in all areas which have authorized distribution dealers. For the name of your nearest Australian authorised service agent, please contact:

### Roband Australia Pty Ltd

1 Inman Road, Cromer, NSW 2099

Warranty Number: 1800 268 848

Phone: (02) 9971 1788 Fax: (02) 9971 1336

All other countries please contact your selling Agent.

Please complete the following details and keep this card in a safe place.

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

MODEL No: \_\_\_\_\_ SERIAL No: \_\_\_\_\_ DATE PURCHASE \_\_\_\_\_

NAME OF DEALER: \_\_\_\_\_

**PLEASE RETAIN THIS SECTION FOR YOUR RECORDS**

**DO NOT POST**

**ROBAND® AUSTRALIA PTY LTD**


OTHER LEADING PRODUCTS AVAILABLE:




Sycloid Toaster




DRINK MIXERS

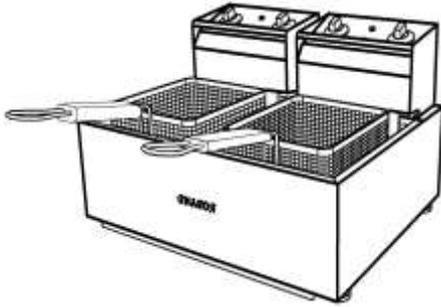


HIGH PERFORMANCE DEEP FRYERS

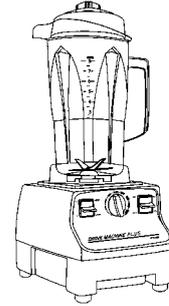

VITAMIX BLENDERS

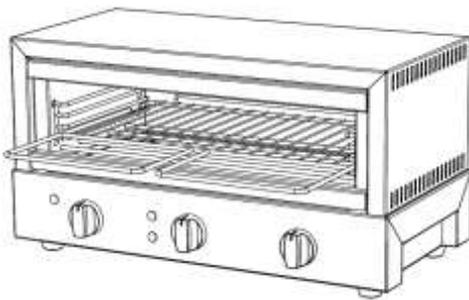

GRILLMAX TOASTERS

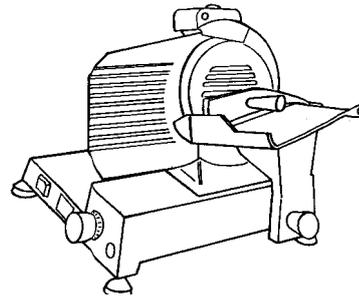

NOAW Slicers

Manufactured/Imported in Australia by:

**ROBAND®** 

Authorised Distributor/Agent